

Guide to fitting fixed pedal inserts in CRM pedals



1. Loosen adjusting screw until axle can be moved forward and back easily by hand



5. Push axle as far backward as possible



2. Push axle so outer bearing is as far forward as possible



6. Being careful not to damage the axle, place the pedal on its side (in an open vise for example) and position the second insert.



3. Push insert behind bearing with the outer lip sitting over the axle



7. Using a suitable drift, lightly tap the insert into place. Replace the end cap. Replace the dust cap.



4. Lightly push the insert home with a suitable screwdriver